

Procedure for Replacing Female Locking Sleeve with Male Locking Sleeve.

November 24, 2015

Step 1: Move the female locking sleeve up the cable length away from the connector to allow more room to work. Use a small flat head screw driver (or equivalent) and pry up the metal snap ring starting at the free end of the ring.



Step 2: Rotate and slide the screw driver along the ring in a clockwise direction until the ring snaps out of position.



Step 3: Remove the female locking sleeve and leave the key ring on the cable if it is in good shape (if the ring is not in good shape, remove as you would a key ring and replace with new ring). Slip the male locking sleeve over the connector.



Step 4: Take a hold of the ring with a small pair of pliers on the thinnest section of the ring.



Step 5: Push the ring into the locking sleeve as shown below.



Step 6: With the plier's nose, push the ring in place until it snaps into position.



