



icTalk Smart Projector Quick Start Guide



Unbox

List of Contents

- 1** A) Power Cord
B) Test Cable
C) Shorting Plug
- 2** D) Power Adaptor
E) Hardware Reset Tool
F) Connector Lubricant
- 3** G) USB Drive
H) icTalk

Connect

CAUTION : Connect equipment in order shown below.

Vibrating icTalk

Install

Setup

14. Load a Configuration File or Create an icTalk Pattern
15. Set additional information if applicable: Instrument Time, Start Delay, Sync
16. Click the Play Button to start pattern

Type	Duration	Unit	Start Freq (Hz)	End Freq (Hz)	Level(dB)	Phase (Deg)	
11	Click	0.5	Seconds	18000	200000	3	-45
12	Click	0.5	Seconds	18000	200000	1	-45
13	Click	0.5	Seconds	20070	200000	4	-45
14	Click	0.5	Seconds	20070	200000	4	-45
15	Click	0.5	Seconds	30117	200000	3	-45
16	Click	0.5	Seconds	30117	200000	3	-45
17	Click	0.5	Seconds	40190	200000	2	-45
18	Click	0.5	Seconds	40190	200000	2	-45
19	Click	0.5	Seconds	50190	200000	-1	-45